



Nokia FastMile 5G Gateway 3 5G12-13W-A



User Guide for Oceania

June 2022

Nokia is committed to diversity and inclusion. We are continuously reviewing our customer documentation and consulting with standards bodies to ensure that terminology is inclusive and aligned with the industry. Our future customer documentation will be updated accordingly.

This document includes Nokia proprietary and confidential information, which may not be distributed or disclosed to any third parties without the prior written consent of Nokia.

This document is intended for use by Nokia's customers ("You"/"Your") in connection with a product purchased or licensed from any company within Nokia Group of Companies. Use this document as agreed. You agree to notify Nokia of any errors you may find in this document; however, should you elect to use this document for any purpose(s) for which it is not intended, You understand and warrant that any determinations You may make or actions You may take will be based upon Your independent judgment and analysis of the content of this document.

Nokia reserves the right to make changes to this document without notice. At all times, the controlling version is the one available on Nokia's site.

No part of this document may be modified.

NO WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY WARRANTY OF AVAILABILITY, ACCURACY, RELIABILITY, TITLE, NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS MADE IN RELATION TO THE CONTENT OF THIS DOCUMENT. IN NO EVENT WILL NOKIA BE LIABLE FOR ANY DAMAGES, INCLUDING BUT NOT LIMITED TO SPECIAL, DIRECT, INDIRECT, INCIDENTAL OR CONSEQUENTIAL OR ANY LOSSES, SUCH AS BUT NOT LIMITED TO LOSS OF PROFIT, REVENUE, BUSINESS INTERRUPTION, BUSINESS OPPORTUNITY OR DATA THAT MAY ARISE FROM THE USE OF THIS DOCUMENT OR THE INFORMATION IN IT, EVEN IN THE CASE OF ERRORS IN OR OMISSIONS FROM THIS DOCUMENT OR ITS CONTENT.

Copyright and trademark: Nokia is a registered trademark of Nokia Corporation. Other product names mentioned in this document may be trademarks of their respective owners.

© 2022 Nokia.

Table of contents

Safety guidelines	7
Introduction	9
Getting to know your FastMile 5G Gateway 3	9
About the modes.....	11
LTE Only	11
LTE-5G EN-DC	11
5G SA	11
Physical interfaces	12
Wi-Fi EasyMesh network with the FastMile 5G Gateway 3	14
Setting up the FastMile 5G Gateway 3	17
Checking the SIM status	17
Inserting the SIM card.....	18
Identifying the ideal location.....	19
Connecting the FastMile 5G Gateway 3	20
Starting the FastMile 5G Gateway 3	20
LCD screens.....	20
Connection screen	21
Devices screen	21
Antenna screen.....	22
Notification screens.....	22
Speed test screen	23
Connecting devices	25
Connecting Wi-Fi devices to the FastMile 5G Gateway 3.....	25
Connecting Ethernet LANs	26
Connecting a device to the TEL port.....	27
What can you do with the WebUI	29
Configuring your network with the WebUI	31
Accessing the WebUI.....	31
WebUI hierarchy screens	35
Status hierarchy screens	35
Statistics hierarchy screens	36
Messages hierarchy screen	36
Network hierarchy screens	37
Application hierarchy screens	37
Security hierarchy screens.....	38
Diagnostics hierarchy screens	38
System hierarchy screens.....	38
Overview screen	39

Network overview	40
Gateway information	40
Radio access	40
Devices	41
Status screen	41
Data usage	42
SIM	42
IMEI (International Mobile Equipment Identity)	43
Cellular network	43
Ethernet	43
Wi-Fi	44
Voice	44
Status 4G	44
Status 5G	45
Statistics screen	46
LAN statistics	46
Cellular statistics	47
WLAN statistics	48
Messages	49
Network menu	50
Wi-Fi networks	50
2.4 GHz (network settings)	50
5 GHz (network settings)	52
Wi-Fi Schedule settings	54
Access Point Name	55
Static routes	56
LAN settings	57
LAN	57
LAN IPv6	59
Connected devices	59
Application screen	60
Port forwarding	60
Port triggering	61
NTP	62
Security screen	62
Firewall	63
IP Filter	63
ALG and DMZ screen	64
Diagnostics screen	66
Logs	66
Speed test by Ookla	67
System screen	67
General	68
Unlocking or unblocking your SIM card	68
Changing the password	71
Device management	72

Logging out	75
Troubleshooting	77
Repositioning for a better signal	77
Using the power button	77
Using the reset button	78
Glossary	79
Identification	81
Technical specifications	83
Wi-Fi	84
Radio - cellular (WAN-side)	85
LTE CA 5G EN-DC mode	85
5G SA	85
Certification	85
Warranty and safety	86
Manufacturer information	87
About Nokia	89

Safety guidelines

Follow these guidelines when using the FastMile 5G Gateway 3:



Warning: If the gateway is dropped -especially on a hard surface-or in case of suspected damage, contact your service provider or the device was purchased.



Warning: The FastMile 5G Gateway 3 must be used with power cables supplied with the equipment.

Introduction

Thank you for purchasing the FastMile 5G Gateway 3.

This document explains how to operate the FastMile 5G Gateway 3 at home to achieve the best performance from the 4G/LTE or 5G network.

The contents of this guide are subject to change without notice.

Getting to know your FastMile 5G Gateway 3

You will find the following items in the box:


- FastMile 5G Gateway 3
- (1) power adapter
- (1) Quick Start Guide (QSG)
- (1) warranty card
- (1) safety card



Note: The FastMile 5G Gateway 3 provides one power adapter that mounts directly to the wall. The label indicates 48W.

The FastMile 5G Gateway 3 typically has 4G/LTE and/or 5G mobile network connectivity in the upstream (WAN) direction and the Nokia Wi-Fi connectivity in the downstream (LAN) direction:

Figure 1 Network connections of the FastMile 5G Gateway 3

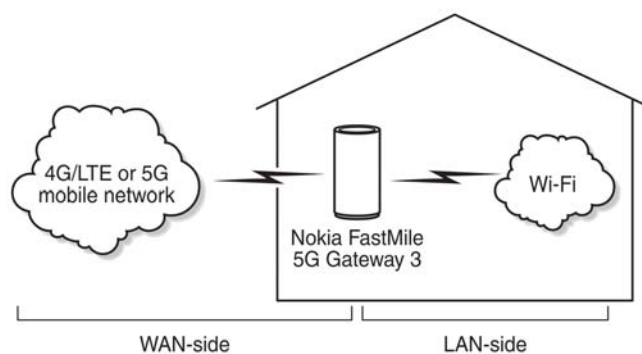

36322

TheFastMile 5G Gateway 3 supports 5G NR and 4G LTE WAN connectivity. The device is compliant with 3GPP Rel-15 standards. Actual throughputs will vary based on aggregated bandwidths, network topology, network load, and radio conditions. Your device can operate either in 5G NR or in 4G LTE. Where both 4G and 5G are available, the FastMile 5G Gateway 3 supports dual connectivity EN-DC.

5G NR provides best download and upload speeds, thus improved user experience for data services such as Internet browsing and video streaming. In case 5G NR coverage is not available in your area, the device can also operate with 4G LTE only as your WAN connection.

The FastMile 5G Gateway 3 provides the following features:

- 4G and 5G WAN connection
- 4G/LTE multi-band omni-directional antenna connectivity (up to 5dBi)
- TEL port for voice service: TEL port may be blocked and unavailable to certain providers
- 5G NSA/SA omni-directional antenna and high gain directional antenna connectivity depending on 5G FR1 band (up to 11dBi)
- 5G NSA/SA WAN connectivity with omni and high gain antennas
- self-contained integrated residential gateway
- Nokia Wi-Fi connectivity:
 - 4x4 IEEE 802.11ax 2.4 GHz (40 MHz) WLAN interface, with MU-MIMO
 - 4x4 IEEE 802.11ax 5 GHz (80 MHz) WLAN interface, with MU-MIMO
 - Wi-Fi 5 support (IEEE 802.11ac)
 - Wi-Fi 6 support (IEEE 802.11ax) - dual band 4+4 connectivity
 - backward compatible with 802.11a/b/g/n/ac
- PIN-locked SIM cards: a SIM PIN number is required to unlock the SIM card and a SIM PUK and PIN number are required to unblock the SIM card
- one logical temperature sensor on IPQ and one logical temperature sensor on the modem
- supports WebUI configuration to enable or disable single SSID: if enabled the CPE will merge 2.4 GHz band SSID and 5 GHz band SSID, and automatically select the frequency band that provides a faster speed
- can operate in the following modes:
 - LTE-only
 - LTE-5G EN-DC
 - 5G SA

About the modes

LTE Only

When operating in the LTE-only mode, the FastMile 5G Gateway 3 will only use the 4G/LTE network to connect to the service provider's network.

LTE-5G EN-DC

When operating in the LTE-5G EN-DC mode, the FastMile 5G Gateway 3 uses a 4G/LTE carrier and 5G NSA carrier at the same time to connect to the service provider's network.

5G SA

When operating in the 5G SA mode, the FastMile 5G Gateway 3 uses the 5G network to connect to the service provider's network.

Physical interfaces

The FastMile 5G Gateway 3 is available in multiple variants. Both variants have a SIM card slot and reset button on the bottom of the unit.

Figure 2 FastMile 5G Gateway 3 variant interface without the TEL port

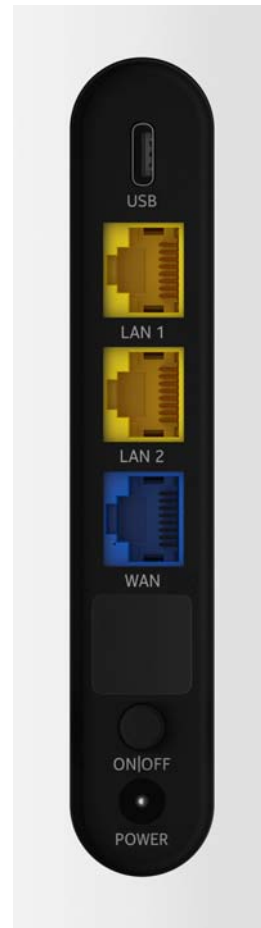


Figure 3 FastMile 5G Gateway 3 variant interface with the TEL port



Three RJ-45 LAN ports can be used:

- to connect up to three Gigabit Ethernet LANs
- for management of the gateway through a locally connected PC or laptop.



Note: The WAN port only functions as a LAN port for this release.


The following interfaces are available on the FastMile 5G Gateway 3, depending on the variant options:

- one USB 3.0 type-C port for connecting a USB-connected storage device

- one TEL port for voice service (RJ11 connector): the TEL port may be blocked and not available for certain providers.
- on/off button
- power input

The SIM card slot is for a 4FF/nano-size SIM card on the bottom of the device.

Figure 4 SIM card slot location

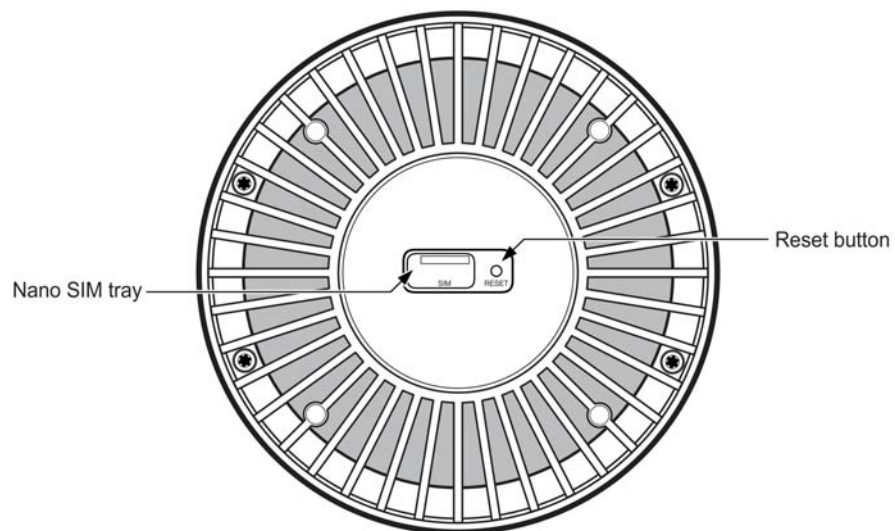

37278

Wi-Fi EasyMesh network with the FastMile 5G Gateway 3

A Wi-Fi EasyMesh network can be created by connecting a Wi-Fi Beacon 2 to the FastMile 5G Gateway 3. The FastMile 5G Gateway 3 serves as the access point to the WAN while up to two Wi-Fi Beacon 2 aid with extending Wi-Fi coverage to every corner of the home, providing seamless roaming to wireless connections.

Both cloudless and cloud methods are supported; the cloud method is managed by NWCC.

Unlike typical Wi-Fi networks that require unique SSIDs for each of the access points or tedious set-up of Wi-Fi extenders, which complicate the user experience, a Wi-Fi EasyMesh network of Wi-Fi Beacon 2 simplifies the end user experience by providing easy device onboarding and automated network optimization.

Adding a Wi-Fi Beacon 2 to create a mesh that has the FastMile 5G Gateway 3 as the access point can be done through the Wi-Fi Mobile App. Contact your service provider for more information about the Wi-Fi Mobile App.

The Wi-Fi Beacon 2 is not included as part of the FastMile 5G Gateway 3.


Setting up the FastMile 5G Gateway 3

Unpack the FastMile 5G Gateway 3, power adapter, and AC cable from the box.

Checking the SIM status

Before using the FastMile 5G Gateway 3, check the status of the SIM.

Figure 5 Checking the SIM card status

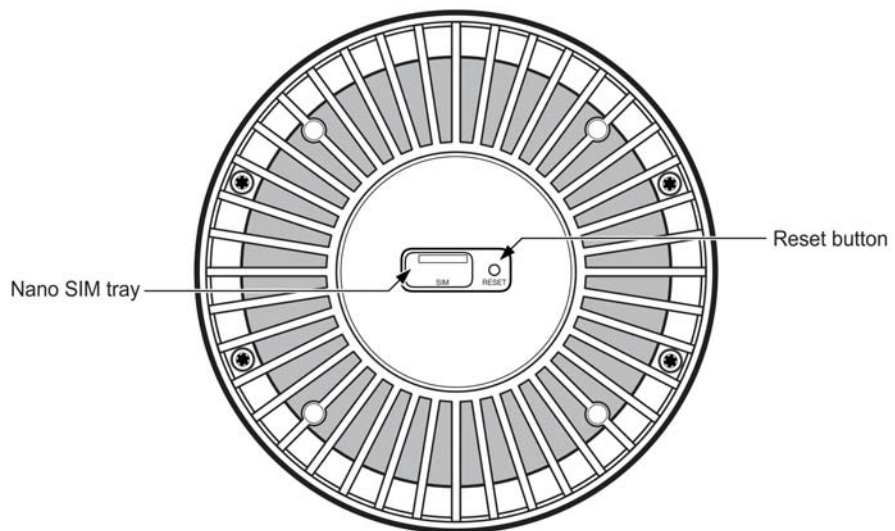

37278



Note: The SIM card is normally provided by the network service provider or operator, and may be installed already.

Inserting the SIM card




Note: The FastMile 5G Gateway 3 requires an appropriate 4FF/nano-size SIM card to connect to 4G/5G network. The gateway might also not start as expected without a SIM card.

For PIN-locked SIM cards, you will need to enter a PIN number. For PIN-blocked SIM cards, you will need to enter a PUK and a PIN number. See [Unlocking or unblocking your SIM card](#).

Turn the FastMile 5G Gateway 3 upside down.


Remove the SIM tray using the finger groove. Place the SIM card in the tray and insert it back into the gateway.

 Figure 6 Remove SIM card tray



37279

Figure 7 Insert SIM card

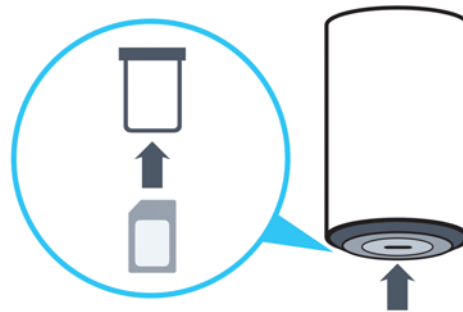

37280


You can skip this step if the SIM card has already been installed by your service provider.

If the SIM card is missing, place the SIM card securely in the tray and insert it back into the FastMile 5G Gateway 3.

Identifying the ideal location

The LCD screen on the top of the unit enables you to locate the FastMile 5G Gateway 3 in an optimal location for 4G/LTE or 5G signal reception.

Figure 8 Identifying the ideal location

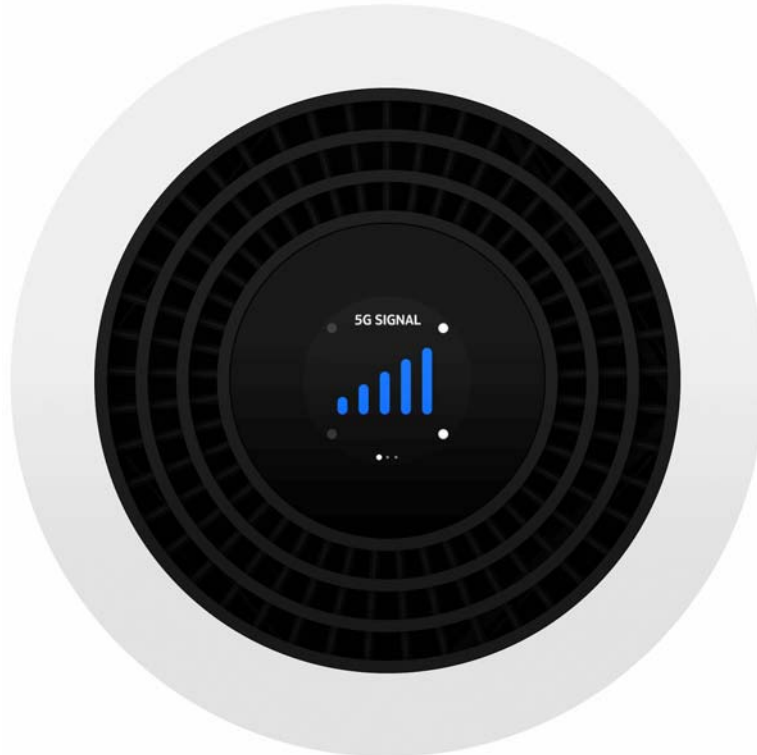

The ideal location for your FastMile 5G Gateway 3 will meet the following criteria:

- near a window where the 5G signal is strongest
- in an open space away from:
 - walls or obstructions
 - heavy-duty appliances or electronics such as microwave ovens and baby monitors
 - metal fixtures, enclosures, cabinets, reinforced concrete, or pipes
- near a power outlet
- on an upper floor of the home or at least 1.8m (6 ft) off the ground floor

Connecting the FastMile 5G Gateway 3

Place the FastMile 5G Gateway 3 on a flat surface, such as a tabletop or similar; close to a window, and near an electrical outlet. Minimize the number of obstructions as much as possible.

If using the power adapter that requires an AC cable, connect the AC cable to the power adapter. Plug the other end of the AC cable into the electrical outlet.

If using the power adapter that mounts directly to the wall, plug the 48W power adapter into the electrical outlet.



Note: Ensure that no cables are blocking the air flow on the bottom of the FastMile 5G Gateway 3 to avoid overheating.

Starting the FastMile 5G Gateway 3

After the FastMile 5G Gateway 3 is connected to a power source, start the device by pressing the On/Off button on the back of the unit.

The LCD screen backlight turns on and several seconds later the booting screen appears on the LCD display indicating that the FastMile 5G Gateway 3 is starting up. After waiting awhile, the LCD screen runs through an animation sequence and the FastMile 5G Gateway 3 goes through its initialization sequence.



Note: The Wi-Fi Mobile App can be used to provide step-by-step installation instructions, along with guidance for additional tasks such as how to configure Wi-Fi settings and how to add Wi-Fi Beacon 2 devices to the Wi-Fi network. The app can be downloaded to a smart phone from app stores as instructed by the LCD screen when the FastMile 5G Gateway 3 is started up for the first time.

LCD screens

The LCD screens on top of the device display information about the FastMile 5G Gateway 3. This section describes the screens available on the LCD after successful pairing.

Swipe the screen to move between screens. The dot on the bottom of the screen indicates the screen that is displayed. The following screens are available:

- connection
- devices
- antenna
- notifications
- speed test

Connection screen

The Connection screen displays the signal strength quality of 4G/LTE and 5G signals. The title of the screen is "5G SIGNAL" or "4G SIGNAL" depending on the selection. You can switch between the 4G and 5G signal information by tapping the 4G or 5G signal bar.

The number of bars indicate the signal strength quality, with five bars indicating the best signal.

A label 'NO SIGNAL' indicates no signal for either 5G or 4G signals, which may be the result of the poor network connectivity or unavailability of radio network momentarily. It may also be due to the lack of a SIM card or a SIM card error; if so, re-insert a valid SIM card.

The LCD screen will display the connection screen periodically as the heartbeat when the LCD screen is in the idle status. The default heartbeat interval is 15s, and the default display time is 5s. Both can be modified by your service provider and must not be zero. The display time must be less than or equal to 1/3 of the interval. The LCD heartbeat function can be enabled or disabled as configured by your service provider.



Note: If you have a good signal, do not relocate or rotate the FastMile 5G Gateway 3. If the position is changed, check the signal strength again. If there is no signal or the signal is not good, see the Antenna section.

Devices screen

The Devices screen indicates the number of devices connected to the FastMile 5G Gateway 3.

For example, when you connect an Ethernet cable between the FastMile 5G Gateway 3 and a laptop, the LCD screen displays the name or MAC address of the device that has paired. The screen is then updated with the number of connected devices. The LCD will show the details of the connected devices when you tap the number.

Press Pair Wi-Fi in the Devices screen to initiate WPS pairing and connect available devices to the Wi-Fi network.

Do the following to remove a device from the FastMile 5G Gateway 3:

- disconnect the Gigabit Ethernet cable from the FastMile 5G Gateway 3

After waiting awhile, the Devices screen will update the number of connected devices. The LCD will show the details of the connected devices when you tap the number.

Antenna screen

The FastMile 5G Gateway 3 supports automatic antenna selection when the device is powered to ensure the best connectivity and Internet speed at a given location.

However, if the 5G signal is low, you can trigger the antenna selection procedure by touching any of the dots available in Connection screen.

The Antenna selection screens show that an antenna is being selected and then that an antenna has been selected. The FastMile 5G Gateway 3 displays the selection of new antenna without restarting the device. However, if antenna selection is not successful, reposition the FastMile 5G Gateway 3 as described in [Identifying the ideal location](#) or [Troubleshooting](#).

Notification screens

The FastMile 5G Gateway 3 has notification screens that indicate ongoing operation, such as:

- ongoing call
- software upgrade
- SIM problem (such as no SIM card; the LCD will display two types of SIM problems: No SIM card and SIM error)
- other notification

- device malfunction (call operator for help or replace device if unable to recover)

Speed test screen

The Speed Test screen displays the last speed test result which is triggered by the user on the LCD screen. The speed test results will display the following parameter information about 45 seconds after the test is initiated:

- download speed (Mbps)
- upload speed (Mbps)


Connecting devices

Connecting Wi-Fi devices to the FastMile 5G Gateway 3

There are two ways to connect Wi-Fi devices to the FastMile 5G Gateway 3: using SSID + Wi-Fi key or using WPS pairing.

Connect Wi-Fi devices to your FastMile 5G Gateway 3 by using the Wi-Fi SSID and Wi-Fi key information on the sticker on the bottom of your FastMile 5G Gateway 3.

Figure 9 Wi-Fi SSID and Wi-Fi key information location

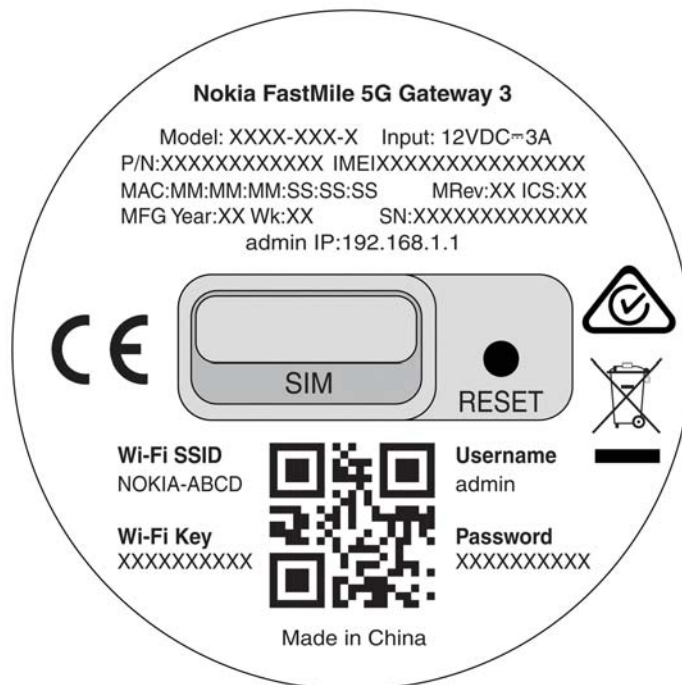

37013

To start the Wi-Fi protected setup process, click the Pair Wi-Fi button on the LCD screen under Devices.

Connecting Ethernet LANs

You can connect up to three Gigabit Ethernet LANs by connecting the cable from the Ethernet LAN to either of the three Gigabit Ethernet LAN connectors on the backside of the FastMile 5G Gateway 3.



Note: One of the LAN ports is marked "WAN" but currently only supports Gigabit Ethernet LAN connectivity.

The diagram below shows an example of the LAN connectors of the FastMile 5G Gateway 3 variant with a TEL port, however the location of the LAN ports is the same on the variant without a TEL port.

Figure 10 Location of LAN ports and TEL port on FastMile 5G Gateway 3



Connecting a device to the TEL port

The FastMile 5G Gateway 3 supports voice service through its telephone (TEL) port.

You can connect a device that has a cable with an RJ11 connector to the FastMile 5G Gateway 3 TEL port on supported units.

Connect the cable with an RJ11 connector to the FastMile 5G Gateway 3 TEL port on the side of the unit and connect the other end of the cable to your device.

What can you do with the WebUI

The FastMile 5G Gateway 3 supports a WebUI, which can be used for configuration, maintenance, and troubleshooting. You can check device status through the WebUI for information on network connectivity.

You can configure the FastMile 5G Gateway 3 using the WebUI available on a PC or laptop. These devices must have an Ethernet LAN connection or a Wi-Fi connection. The WebUI also displays useful information about the FastMile 5G Gateway 3. The FastMile 5G Gateway 3 is a secure device.

The http is pre-configured as the default access mode to the WebUI. The https access mode can only be used if the FastMile 5G Gateway 3 has been pre-configured by the service provider.

Configuring your network with the WebUI

You can manage the FastMile 5G Gateway 3 and any connected devices using the WebUI on a PC or laptop.



Note: The WebUI screens are designed for 1920 * 1080p resolution. The WebUI supported browsers include Chrome, Edge, Mozilla Firefox, and Safari.

This section describes:

- how to establish a connection between the device on which you will access the WebUI and the FastMile 5G Gateway 3
- how to log into the WebUI when needed to view and configure network parameters

Accessing the WebUI

1. Ensure the Local Area Connection setting on your PC or laptop is configured as "Obtain an IP address automatically".




Note: The FastMile 5G Gateway 3 must be powered up, see [Using the power button](#).

2. Do one of the following:
 - a. Establish a Wi-Fi connection
 - b. Connect your PC or laptop through the RJ45 Gigabit Ethernet LAN ports on the backside of the FastMile 5G Gateway 3
3. On your device, open a web browser, and enter the IP that is available on the label at the bottom of the gateway, for example:
<http://192.168.1.1> (default) or <https://192.168.1.1> (if pre-configured)

The Overview screen appears with the Nokia WebUI menu on the left of the screen.

Figure 11 Overview screen

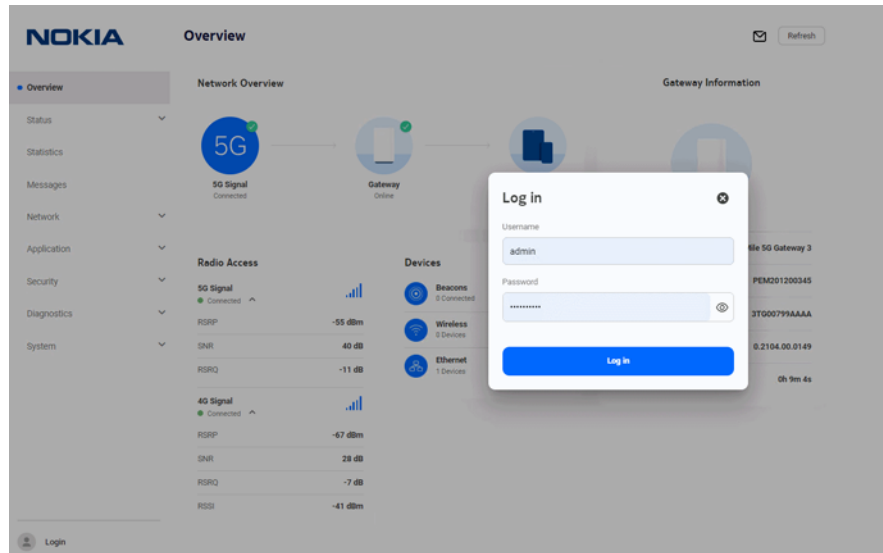

4. Click Login, or click on any of the menu items.
 The log in window appears and you are prompted to log in.
 Type the username and password in the respective fields and then click Login.


Figure 12 Username and password login



Note: After predefined consecutive unsuccessful login attempts, you will be locked out for a specific amount of time.

A generic sample of the bottom label below shows the location of the username and password. Note that label content may differ per customer requirements.

Figure 13 Location of username and password on bottom label

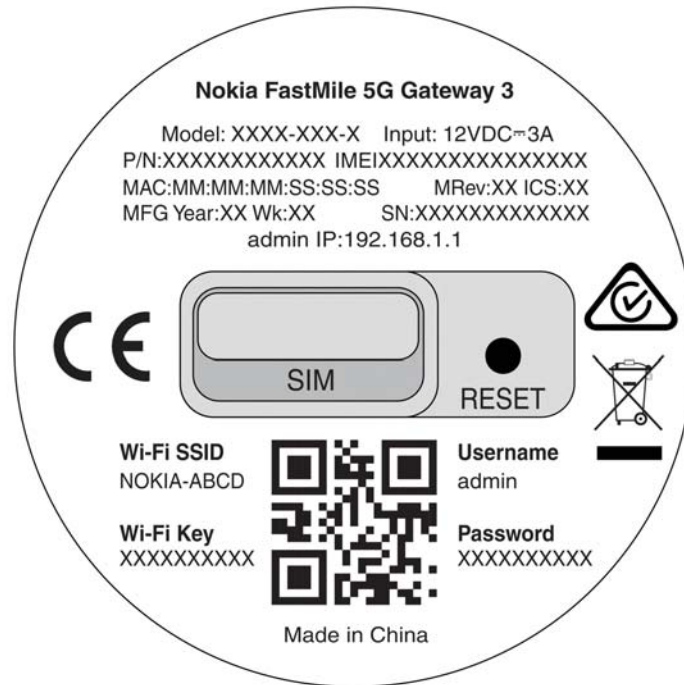

37013

You should now see the Overview screen which provides information on the 5G, FastMile 5G Gateway 3, and connected devices status.

To improve security, Nokia recommends that you change the default password. You can do this by going to the [Changing the password](#) procedure.

WebUI hierarchy screens

The following screen hierarchy illustrates the FastMile 5G Gateway 3 WebUI main menu to help you quickly navigate to the configuration task that you may need to complete.

Figure 14 Main menu screen



37283


Logging in allows you to use the following menu options:

- status
- statistics
- messages
- network
- application
- security
- diagnostics
- system

Status, statistics, messages, network, application, security, diagnostics, and system menu options have sub-menus and screens, which are illustrated by the following figures.

Status hierarchy screens


The status screen provides the following menu options:

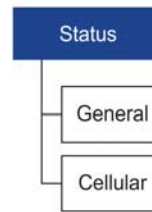Figure 15 Status screen

37284

Statistics hierarchy screens

The statistics screen provides the following menu options.

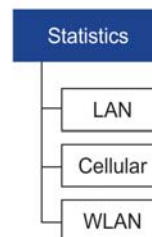Figure 16 Statistics screen

37285

Messages hierarchy screen

The messages screen will display all messages sent by the service provider with following menu options.


Figure 17 Messages screen

37286

Network hierarchy screens

The network screen provides the following menu options. Clicking on the arrow beside Wi-Fi networks, cellular and LAN settings displays additional menu options.

Figure 18 Network screen

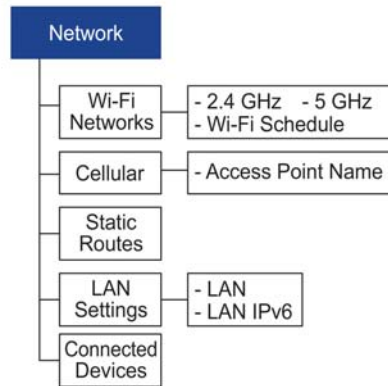


37287

Application hierarchy screens

The application screen provides the following menu options:

Figure 19 Application screen

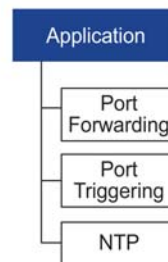


37288

Security hierarchy screens

The security screen provides the following menu options:

Figure 20 Security screen

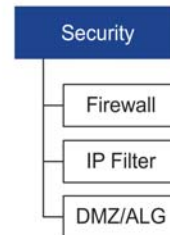


37289

Diagnostics hierarchy screens

The diagnostics screen provides the following menu options:

Figure 21 Diagnostics screen

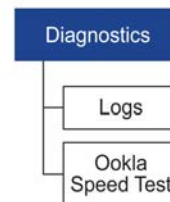


37290

System hierarchy screens

The system screen provides the following menu options:

Figure 22 System screen

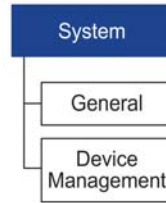

37291


Overview screen

The Overview screen contains four sections:

- network overview
- radio access
- devices
- gateway information
- unread messages, if any

Click Refresh at any time to update the displayed information.

Figure 23 Overview screen

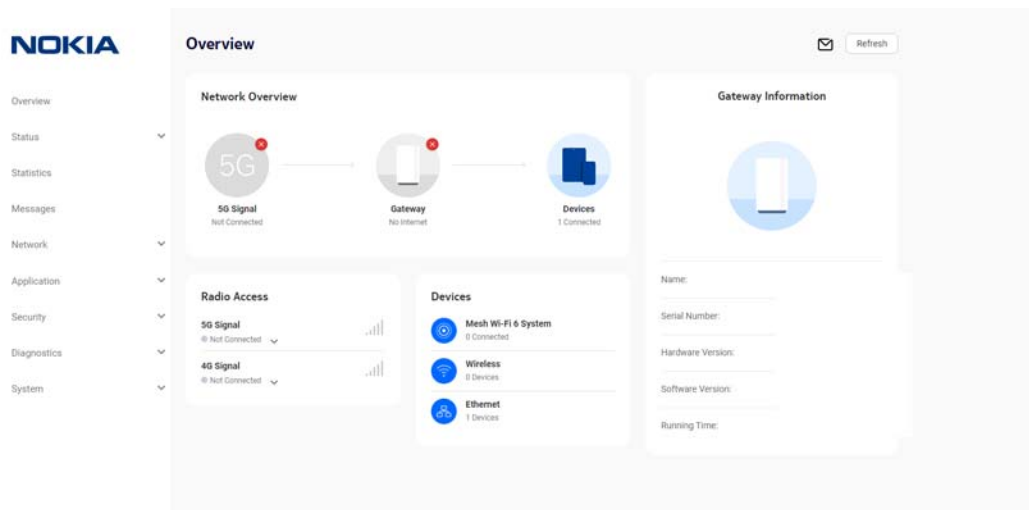

Network overview

The top of the overview screen shows the connection status of 5G, FastMile 5G Gateway 3, and the number of connected devices.

Gateway information

The Gateway Information section shows the:

- name: the name and version of the gateway
- serial number
- hardware version
- software version
- running time: how long it has been since the FastMile 5G Gateway 3 last reset/power cycle

Use this information when contacting the service provider for customer service.

Radio access

The 5G signal strength is represented by the number of bars, and the following parameters:

- RSRP
- SNR
- RSRQ

The 4G signal strength is represented by the number of bars and the following parameters:

- RSRP
- SNR
- RSRQ
- RSSI

Devices

Devices shows the number of devices connected to the FastMile 5G Gateway 3: Wi-Fi EasyMesh 6 System, wireless and Ethernet.

Status screen

From the WebUI left-side menu, selecting Status will show you information as follows:

Under the Status / General page, you can find the following:

- data usage
- SIM
- IMEI (International Mobile Equipment Identity)
- cellular network
- Ethernet
- Wi-Fi
- voice


Under the Status / Cellular page, you can find the following:

- 4G: status, PCI, band, EARFCN, ECI, and carrier aggregation
- 5G: status, PCI, supported bands, NR-ARFCN, NCI, and carrier aggregation

Click Refresh at any time to update the displayed information.

The figures below show aspects of the status screen.

Figure 24 Status / General page

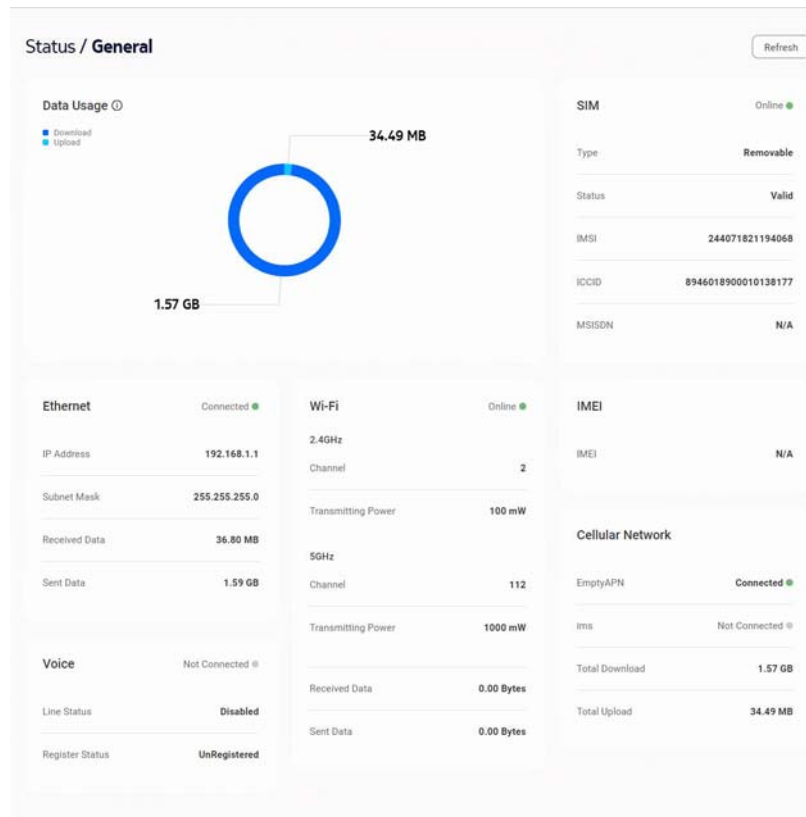

Data usage

Data usage represents the amount of data that is downloaded and uploaded from the FastMile 5G Gateway 3 since its latest reset/power-cycle.

SIM

The SIM status will be either online or offline.

A green dot, indicating the online status, indicates your SIM is activated and working well. A gray dot indicates the SIM card is missing (see [Inserting the SIM card](#)) or may not be working, or it was installed incorrectly, or you will need to enter your PIN / PUK number (see [Unlocking or unblocking your SIM card](#)). Contact your service provider if you have checked that the SIM card is properly installed but it is still not working.



Note: For uSIM cards, when status shows '*Available*' it means PIN number verification is needed. When status shows '*Blocked*' it means the SIM PIN is locked and you need to input a PUK number and a new PIN number. When status shows '*Error*' it means the SIM card is destroyed because of a PUK error, or a modem failure, or a broken SIM card, or a specific PIN lock acceptance feature is not active but the SIM card PIN number is locked.

After another SIM card B with PIN enabled is inserted to the CPE and its PIN is verified, the SIM card A PIN number will be needed when it is inserted.

IMEI (International Mobile Equipment Identity)

IMEI information represents an identifier for each mobile device.

Cellular network

Under the Status / General page, there is the Cellular Network Card which has the following information:

- access point details include all APNs
- download and upload totals

For each APN, there is a dot to show connection status, as follows:

- green: connected
- gray: not connected

Ethernet

The Ethernet information status indicates whether a device is connected to the Ethernet connection:

- green: there is an Ethernet connection
- gray: there is no Ethernet connection

You may view the following Ethernet connectivity information:

- IP address: local address
- subnet mask: default subnet mask

- received data: the amount of data received via the Ethernet connection
- sent data: the amount of data sent via the Ethernet connection

Wi-Fi

The Wi-Fi status (online/offline) indicates whether the Wi-Fi is active, regardless of whether a device is wirelessly connected:

- green: Wi-Fi is enabled
- gray: Wi-Fi is disabled

You may view Wi-Fi connectivity information:

- 2.4 GHz information includes: the channel number and transmission power (mW)
- 5 GHz information includes: the channel number and transmission power (mW).
- received data: the amount of data received via the Wi-Fi connection
- sent data: the amount of data sent via the Wi-Fi connection

Voice

The voice status indicates whether a device is connected to the voice network:


- green: there is a voice connection
- gray: there is no voice connection

You may view voice information including Line Status (Enabled/Disabled) and Register Status (Registered/Unregistered).

Status 4G

The Status / Cellular page for the 4G status tab displays PCI, band, EARFCN, ECI, and carrier aggregation downlink / uplink status. In carrier aggregation, one or more carriers are combined to increase the capacity of the link, thereby increasing the bandwidth for the user.


Figure 25 Status / Cellular Page / 4G

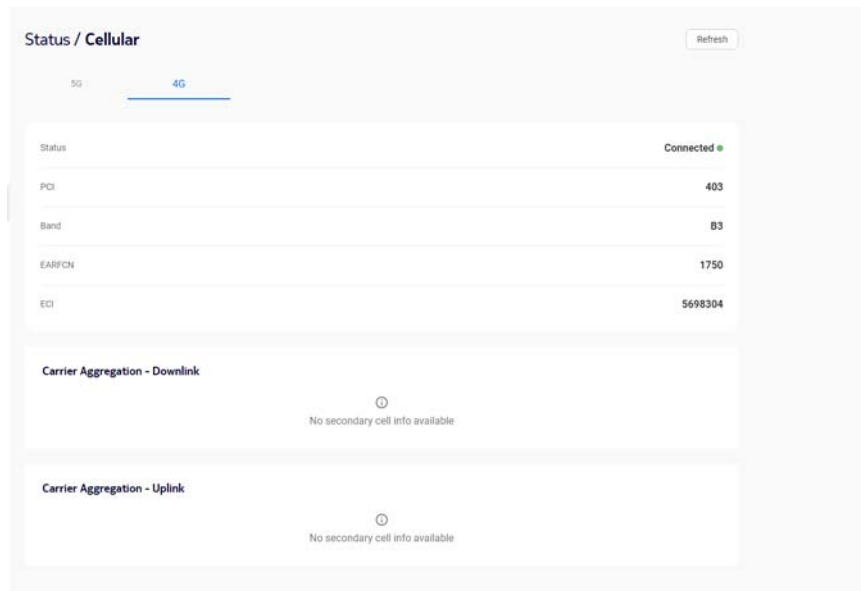

Note: When downlink or uplink carrier aggregation information is available, it will be displayed.

Status 5G

The Status/ Cellular page for 5G status tab shows the detail information for status, PCI, supported bands, NR-ARFCN, NCI, and carrier aggregation downlink / uplink status. In carrier aggregation, one or more carriers are combined to increase the capacity of the link, thereby increasing the bandwidth for the user.

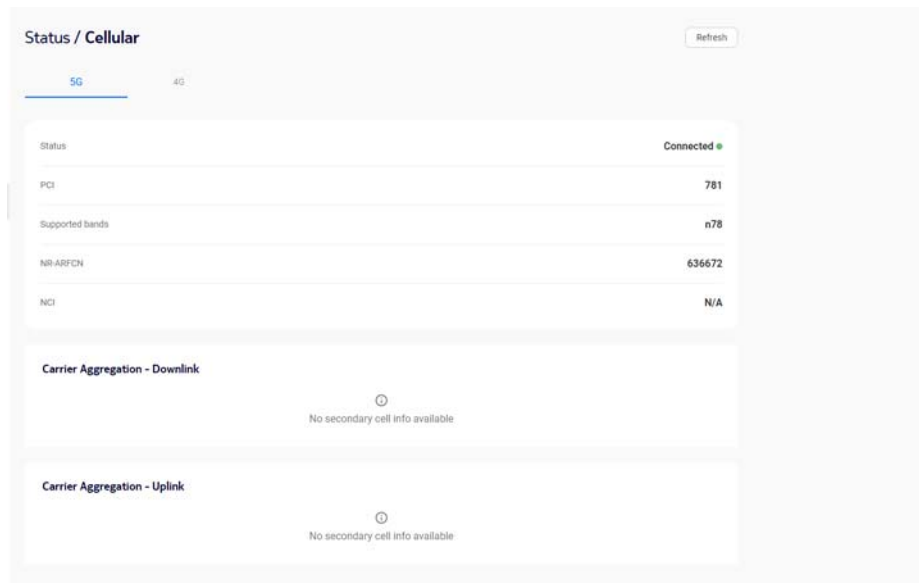Figure 26 Status / Cellular Page /5G

Note: When downlink or uplink carrier aggregation information is available, it will be displayed.

Statistics screen

From the WebUI left-side menu, selecting Statistics will show you the amount of data that has crossed the FastMile 5G Gateway 3 LAN, cellular, and WLAN interfaces.

Click Refresh at any time to update the displayed information.

LAN statistics

By default, you will see the following statistics, per LAN port tab, upon accessing the Statistics screen:

- status
- sent bytes
- received bytes

- sent packets
- received packets
- discarded sent packets
- discarded received packets
- sent errors
- received errors
- multicast sent packets
- multicast received packets

Figure 27 Statistics: LAN

Statistics		
	Cellular	WLAN
Counter	LAN1	LAN2
Status	Down	Up
Sent Bytes	0	1711122435
Received Bytes	0	38629839
Sent Packets	0	1138532
Received Packets	0	123626
Discarded Sent Packets	0	0
Discarded Received Packets	0	0
Sent Errors	0	0
Received Errors	0	0
Multicast Sent Packets	0	636
Multicast Received Packets	0	482


Cellular statistics

From the Statistics screen, select Cellular tab; you will see the following statistics (per configured access point name and service):

- sent bytes

- received bytes
- sent packets
- received packets
- sent errors
- received errors
- discarded sent packets
- discarded received packets

Figure 28 **Statistics: Cellular**

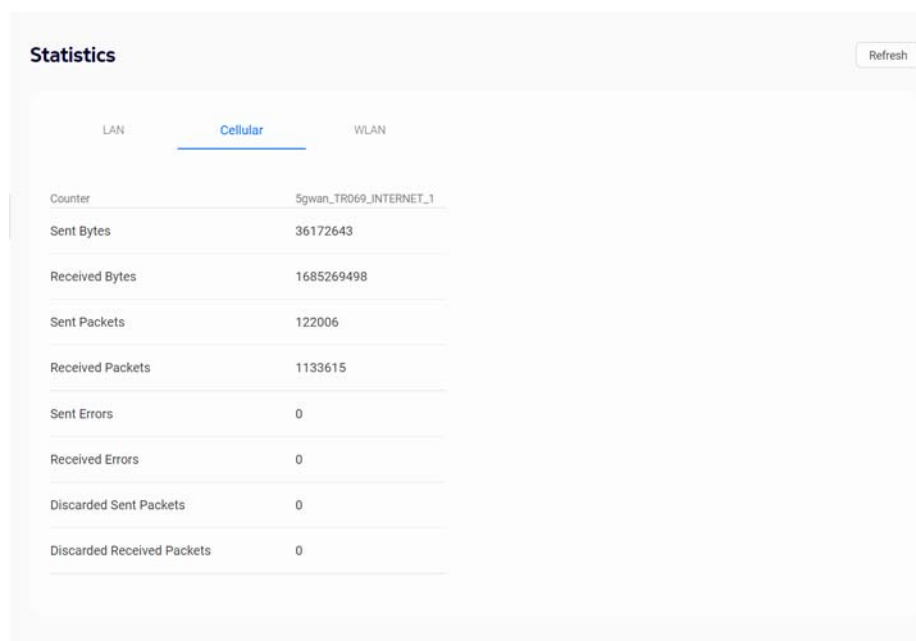

LAN	Cellular	WLAN
Counter	5gwan_TR069_INTERNET_1	
Sent Bytes	36172643	
Received Bytes	1685269498	
Sent Packets	122006	
Received Packets	1133615	
Sent Errors	0	
Received Errors	0	
Discarded Sent Packets	0	
Discarded Received Packets	0	


WLAN statistics

From the Statistics screen, select the WLAN tab; you will see the following statistics for 2.4 GHz and 5 GHz frequencies:

- SSID
- sent bytes
- received bytes
- sent packets
- received packets
- discarded sent packets


- discarded received packets
- sent errors

Figure 29 **Statistics: WLAN**

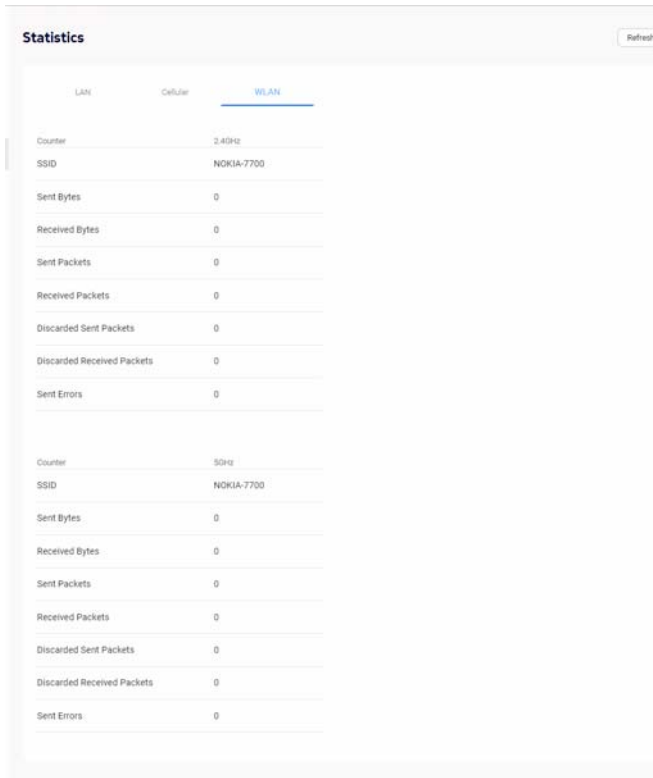

Messages

From the Messages screen, you can see if you have any messages. Messages sent from the service provider can be viewed and deleted.

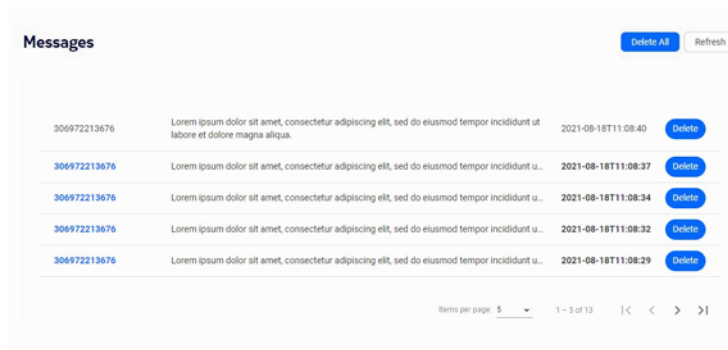Figure 30 Messages

Network menu

From the WebUI left-side menu, select Network to manage the following:

- Wi-Fi Networks (2.4 GHz and 5 GHz networks) and Wi-Fi schedule
- cellular (APN - Access Point Name)
- static routes
- LAN settings (LAN and LAN IPv6)
- connected devices

Wi-Fi networks

From the Network menu, select Wi-Fi networks.

The 2.4 GHz, 5 GHz, and Wi-Fi Schedule menu options appear in the FastMile 5G Gateway 3 WebUI menu.

2.4 GHz (network settings)

Click 2.4 GHz.

The Network/Wi-Fi Networks/2.4 GHz screen appears.

You can select the basic or the advanced screen view by clicking the appropriate radio button option at the top of the screen.

Figure 31 Network: Wi-Fi Networks 2.4 GHz advanced view

Network / Wi-Fi Networks / 2.4GHz

Settings Mode Basic Advanced

Wi-Fi 2.4GHz General Settings

Enable Wi-Fi 2.4GHz

Transmission Mode

Channel Bandwidth

Channel

Transmission Power

Enable Wi-Fi Multimedia (WMM)

Maximum Number Of Clients

Configure SSID 1

Select SSID To Configure

SSID Name

Enable Single SSID

Enable SSID

Enable Broadcast

Total Number Of Clients

Select Encryption Mode

Wi-Fi Key


[Save Changes](#)

The advanced view includes the following parameters to configure:

- Wi-Fi 2.4 GHz general settings:
 - enable Wi-Fi 2.4 GHz
 - transmission mode
 - channel bandwidth
 - channel
 - transmission power
 - enable Wi-Fi Multimedia (WMM)
 - maximum number of clients
- configure SSID 1:
 - select SSID to configure
 - SSID name
 - enable single SSID
 - enable SSID
 - enable broadcast
 - total number of clients
 - select encryption mode

- Wi-Fi key

Figure 32 Network: Wi-Fi Networks 2.4 GHz basic view

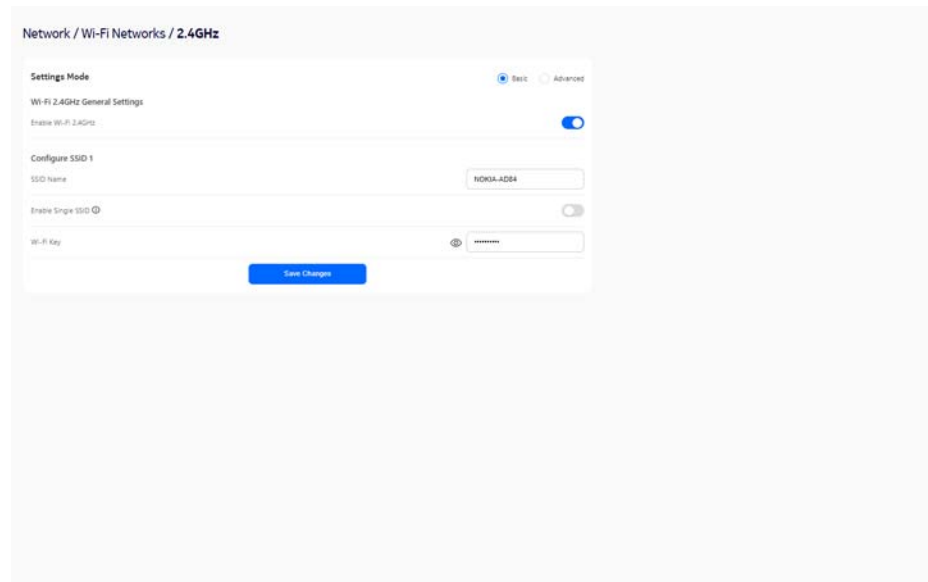

The basic view includes the following parameters to configure:

- Wi-Fi 2.4 GHz general settings:
 - enable Wi-Fi 2.4 GHz
- configure SSID 1:
 - SSID name
 - enable single SSID
 - Wi-Fi key

Click Save Changes.

5 GHz (network settings)

From the Network menu, select Wi-Fi networks.

The 2.4 GHz, 5 GHz, and Wi-Fi schedule menu options appear in the FastMile 5G Gateway 3 WebUI menu.

Click 5 GHz.

The Network/Wi-Fi Networks/5 GHz screen appears.

You can select the basic or the advanced screen view by clicking the appropriate radio button option at the top of the screen.

Figure 33 Network: Wi-Fi Networks 5 GHz advanced view

The screenshot displays the 'Network / Wi-Fi Networks / 5GHz' configuration page in 'Advanced' mode. The settings are organized into several sections:

- Settings Mode:** Radio buttons for 'Basic' and 'Advanced' (selected).
- Wi-Fi 5GHz General Settings:**
 - Enable Wi-Fi 5GHz:
 - Transmission Mode: Auto (80%)
 - Channel Bandwidth: 80MHz
 - Channel: Auto
 - Transmission Power: 100%
 - Enable Wi-Fi Multimedia (WMM):
 - Enable MU-MIMO:
 - Maximum Number Of Clients: 128
- Configure SSID 5:**
 - Select SSID To Configure: SSID6
 - SSID Name: NOKIA-AD64
 - Enable Single SSID:
 - Enable SSID:
 - Enable Broadcast:
 - Total Number Of Clients: 128
 - Select Encryption Mode: WPA2/WPA3 (AES)
 - Wi-Fi Key: [Redacted]

A 'Save Changes' button is located at the bottom of the form.

The advanced view includes the following parameters to configure:

- Wi-Fi 5 GHz general settings:
 - enable Wi-Fi 5 GHz
 - transmission mode
 - channel bandwidth
 - channel
 - transmission power
 - enable Wi-Fi Multimedia (WMM)
 - enable MU-MIMO
 - maximum number of clients
- configure SSID 5:
 - select SSID to configure
 - SSID name

- enable single SSID
- enable SSID
- enable broadcast
- total number of clients
- select encryption mode
- Wi-Fi key

Figure 34 Network: Wi-Fi Networks 5 GHz basic view

The screenshot shows the 'Network / Wi-Fi Networks / 5GHz' configuration page. It features a 'Settings Mode' section with 'Basic' selected and 'Advanced' unselected. Below this is the 'Wi-Fi 5GHz General Settings' section, which includes a toggle for 'Enable Wi-Fi 5GHz' (currently on). The 'Configure SSID 5' section contains a text field for 'SSID Name' with the value 'NOKIA-4204', a toggle for 'Enable Single SSID' (currently off), and a text field for 'Wi-Fi Key' with a masked password. A blue 'Save Changes' button is located at the bottom of the form.

The basic view includes the following parameters to configure:

- Wi-Fi 5 GHz general settings:
 - enable Wi-Fi 5 GHz
- configure SSID 5:
 - SSID name
 - enable single SSID
 - Wi-Fi key

Click Save Changes.

Wi-Fi Schedule settings

From the Network menu, select Wi-Fi networks.

The 2.4 GHz, 5 GHz, and Wi-Fi schedule menu options appear in the FastMile 5G Gateway 3 WebUI menu.

Click Wi-Fi Schedule.

The Wi-Fi Networks/Wi-Fi schedule screen appears.

Figure 35 Wi-Fi schedule




1. Enable the Wi-Fi Scheduling to turn the wireless signal off for the configured period.
2. Click the + New Schedule button to add a rule.
A panel appears for configuring wireless schedule rules.
3. Enter a start and end time for the period for which you want the wireless signal to be off.
4. Choose Everyday or a Specific day(s) of the week.
If you choose specific day(s), select the check boxes for the desired days.
The recurrence pattern shows the rules created to date.
5. Click Add.
6. View the current date and time of your device.

Access Point Name

From the Network / Cellular menu, select APN Access Point Name.

The Network / Cellular / APN - Access Point Name screen appears.

Figure 36 Network/Cellular: Access Point Name

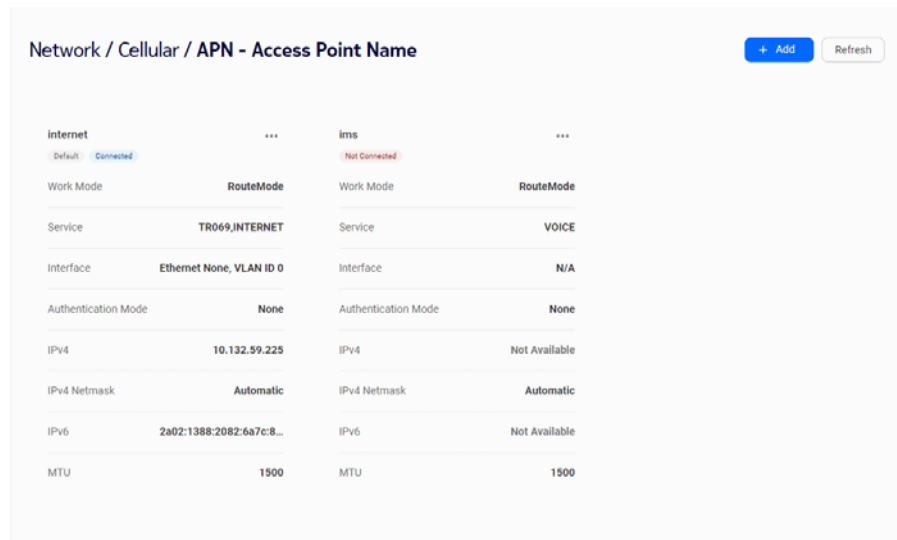

Edit and delete access points by clicking the options icon (three dots in the top right corner of each access point box). You can configure up to 5 access points. In Route mode (services available are TR-069, Internet, IPTV, and Voice), you can configure 4 access points, and in bridge mode (for service data), you can configure 1 access point. Contact your service provider for more information about access points.



Note: You are not able to delete the default access point.

Click Update.

Static routes

From the Network menu, select Static Routes.

The Network/Static Routes screen appears.

Figure 37 Network: Static Routes

After configuring the applicable parameters:

- destination IPv4
- destination netmask
- gateway IPv4
- interface

You can add a static route by clicking Add+.

You can delete a static route by selecting it from the list and clicking Delete.

LAN settings

From the Network menu, select LAN Settings.

The LAN and LAN IPv6 menu options appear in the FastMile 5G Gateway 3 WebUI menu.

LAN

Click LAN.

The Network/LAN Settings/LAN and Static DHCP screen appears.

Figure 38 Network: LAN Settings

You can configure the following LAN settings:

- IPv4 address
- subnet mask
- enable DHCP
- DHCP start IP address
- DHCP end IP address
- DHCP lease time
- static DHCP

Click Save Changes.



Note: Check the DHCP range before you change the LAN IP. If you want to use the LAN IP, which is included in the previous DHCP range, change the DHCP range first. Click Save. Then, change the LAN IP.

Configure a static route and bind a MAC address to a specific local LAN/IP address by entering the MAC and IP address in the Static DHCP text boxes.

Click Add.

Your values appear in the table below.

Repeat for all MAC addresses to be bound.

The configured MAC and IPv4 address appear in the table below. Click Delete to remove any of the MAC address configurations.

LAN IPv6

Click LAN IPv6.

The Network/LAN settings/LAN IPv6 screen appears.

Figure 39 Network: LAN Settings: LAN IPv6



Click the switch button to enable or disable the IPv6 DHCP LAN.

Connected devices

From the Network menu, select Connected Devices.

The Network/Connected Devices screen appears.

Figure 40 Network: Connected Devices

The screenshot shows the 'Network / Connected Devices' page. At the top right, there is a 'Refresh' button. Below the header, there is a table with the following data:

Status	Connection Type	Device Name	IPv4 Address	IPv6 Address	Hardware Address	IP Address Allocation	Lease Remaining	Last Active Time
Active	Ethernet	N-5CG6464410	192.168.0.192	fe80::2411:eb3e:7067:b428	c8:d3:ff:74:6d:41	DHCP	22 h 19 m 9 s	18/02/2021 09:53:37 AM



Note: To delete a device, disconnect the Gigabit Ethernet cable from the FastMile 5G Gateway 3. After a while, the Devices screen will update the number of connected devices.

Application screen

From the WebUI left-side menu, selecting Application allows you to configure port forwarding, port triggering, and NTP parameters.

Port forwarding

Click Port Forwarding.

The Port Forwarding screen appears.

Figure 41 Application: Port Forwarding

Application / Port Forwarding

Application Name Custom Settings ▾

WAN Port [] - []

LAN Port [] - []

Internal Client Custom Setti... ▾ []

Protocol TCP ▾

WAN Connection List Sgwan_TR069_INTERNET_1 ▾

[Add](#)

Application Name	WAN Connection	WAN Port	LAN Port	Device Name	Internal Client	Protocol	Status	Delete
Yahoo Messenger	Sgwan_TR069_INTERNET_1	5050-5050	5050-5050	N-5C66464410	192.168.1.192	TCP	Active	Delete

You can configure the following settings:

- application name
- WAN Port
- LAN Port
- internal client
- protocol
- WAN connection list

Click Add.

The settings appear in the table below. Click Delete to remove any configuration from the table.

Port triggering

Click Port Triggering.

The Port Triggering screen appears.

Figure 42 Application: Port Triggering

Application / Port Triggering

Application Name Custom Settings ▾

Open Port [] - []

Triggering Port [] - []

Expire Time 600

Open Protocol TCP ▾

Trigger Protocol TCP ▾

WAN Connection List Sgwan_TR069_INTERNET_1 ▾

[Add](#)

Application Name	WAN Connection	Open Port	Triggering Port	Expire Time	Open Protocol	Trigger Protocol	Status	Delete
Call of Duty	Sgwan_TR069_INTERNET_1	28960-28960	6060-6070	600	UDP	TCP	Active	Delete

You can configure the following settings:

- application name
- open port
- triggering port
- expire time
- open protocol
- triggering protocol
- WAN connection list

Click Add.

The settings appear in the table below.

Click Delete to remove any configuration from the table.

NTP

Click NTP.

The NTP screen appears.

Figure 43 Application: NTP

Application / NTP

Enable NTP	<input checked="" type="checkbox"/>
Current Time	09/25/2020 10:20:11 PM
Primary Time Server	time.nist.gov
Secondary Time Server	None
Third Time Server	None
Time Zone	(GMT+12:00)Fiji

Save Changes

You can configure the following settings:

- enable NTP (NTPv6 can not be configured in the WebUI NTP time server)
- primary time server
- secondary time server
- third time server
- time zone

You can view the following settings:

- current time

Click Save Changes.

Security screen

From the WebUI left-side menu, selecting Security allows you to configure the firewall security level, IP filter parameters, and ALG/DMZ.

Firewall

The firewall security level only applies to services provided by the FastMile 5G Gateway 3.


The following firewall security levels can be configured for the FastMile 5G Gateway 3:

- off: all inbound and outbound traffic is allowed
- low: all outbound traffic and pinhole-defined inbound traffic is allowed
- high: all inbound traffic is denied and only minimal common outbound services are permitted.

Click Firewall.

The Firewall screen appears.

Figure 44 Security: Firewall

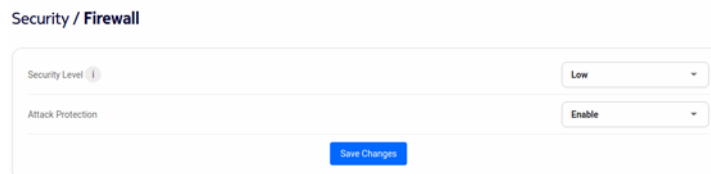

Security / Firewall

Security Level	Low
Attack Protection	Enable

Save Changes

You can configure the following firewall settings:

- security level (off, low, or high)
- attack protection (enable/disable)

Click Save Changes.

IP Filter

Click IP Filter.

The IP Filter screen appears.

Figure 45 Security: IP Filter

Security / IP Filter

Enable IP Filter

Mode Drop for upstream

Internal Client Custom settings

Local IP Address

Source Subnet Mask

Remote IP Address

Destination Subnet Mask

Protocol ALL

[Save Changes](#)

Mode	Internal Client	Protocol	Local IP Address	Source Subnet Mask	Remote IP Address	Destination Subnet Mask	Wan Port Range	Las Port Range	Delete
Drop for upstream	% SCS464410	FTP	192.168.1.192				TCP: 21UDP: 0		Delete

You can configure the following IP filter settings:

- enable IP filter
- mode
- internal client
- local IP address
- source subnet mask
- remote IP address
- destination subnet mask
- protocol

Click Save Changes.

Click Delete to remove any configuration from the table.

ALG and DMZ screen

From the WebUI left-side menu, selecting DMZ/ALG allows you to configure Application-Level Gateway (ALG) and Demilitarize Zone (DMZ) parameters.

Click DMZ/ALG.

The ALG Configuration and DMZ Configuration screen appears.

Figure 46 Security: DMZ/ALG

ALG Configuration

FTP	<input checked="" type="checkbox"/>
TFTP	<input checked="" type="checkbox"/>
SIP	<input checked="" type="checkbox"/>
H323	<input checked="" type="checkbox"/>
RTSP	<input checked="" type="checkbox"/>
L2TP	<input checked="" type="checkbox"/>
IPSEC	<input checked="" type="checkbox"/>
PPTP	<input checked="" type="checkbox"/>

[Save Changes](#)

DMZ Configuration

WAN Connection List: Spwan_TR069_INTERNET_1

DMZ IP Address: Custom Self... 0.0.0.0

Enable DMZ:

[Save Changes](#)

You can enable or disable the following ALG settings:

- FTP
- TFTP
- SIP
- H323
- RTSP
- L2TP
- IPSEC
- PPTP

Click Save Changes.

You can configure the following DMZ settings:

- WAN connection list
- DMZ IP address
- enable DMZ

Click Save Changes.

Diagnostics screen


From the WebUI left-side menu, selecting Diagnostics allows you to configure log settings and perform speed tests by Ookla.

Logs

Click Logs.

The Logs screen appears.

Figure 47 Diagnostics / Logs

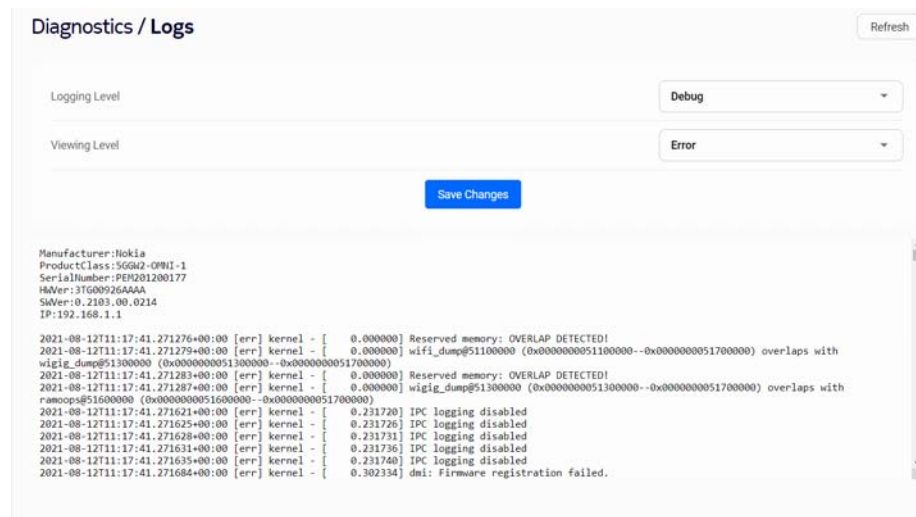

Choose a logging level from the drop-down menu to determine the types of events that are recorded in the log file.

Choose the viewing level from the drop-down menu to determine the types of events that are shown in the log file.


Click Save Changes. The log file is displayed at the bottom of the screen.

Speed test by Ookla

From the Diagnostics page, click Speed test by Ookla. You should be prompted to agree to use this speed test service by Ookla as per their privacy policy.

The Speed test screen appears.

Figure 48 Speed test by Ookla

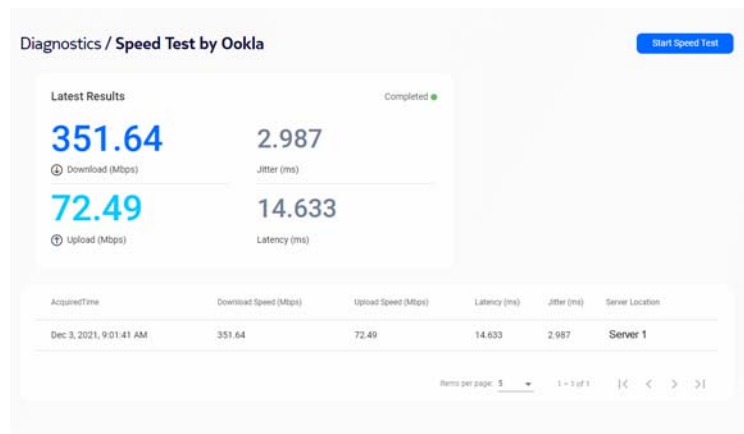

Click the Start test button. The test may take up to 45 seconds to complete.

The Speed test results will display the following parameter information:

- download speed (Mbps)
- upload speed (Mbps)
- latency (ms)
- jitter (ms)
- server location

System screen

The System screen has two tabs:

- general
- device management



Note: The FastMile 5G Gateway 3 does not have any LEDs, therefore the system screen does not show a LEDs option.

If you are logged in as an admin, the WebUI displays a message that the device does not have any LEDs.

For LCD information, see the section [LCD screens](#).

General

From the WebUI left-side menu, selecting System and then General will show you these options:

- enter PIN to unlock your SIM card
- enter PUK and PIN to unblock your SIM card
- reboot device: the device restarts and keeps existing configuration
- factory reset: the device restarts and erases existing configuration
- change password



Note: For a PIN-locked SIM card after reboot, or factory reset, a PIN number will be needed. Also, if a second SIM card B is used with PIN enabled and inserted to the CPE and its PIN is verified, the SIM card A PIN number will be needed when it is inserted.

For uSIM cards, when status shows '*Available*' it means PIN number verification is needed. When status shows '*Blocked*' it means the SIM PIN is blocked and you need to input a PUK number and a new PIN number. When status shows '*Error*' it means the SIM card is disabled because of a PUK error, or a modem failure, or a broken SIM card, or a specific PIN lock acceptance feature is not active but the SIM card PIN number is locked.

Unlocking or unblocking your SIM card

A SIM PIN number is defined by default and provided in a SIM plastic envelope.

If your PIN number is locked, from the System General screen, click Enter PIN to unlock your SIM card.

Figure 49 **Unlock your SIM card**



The Enter PIN to unlock SIM entry box will appear. Enter your PIN number.


Figure 50 **Enter PIN to unlock your SIM card**



Entering the SIM PIN incorrectly 3 times will result in the SIM card being blocked.

If your SIM card is blocked, from the System General screen click Enter PUK to unblock your SIM card.

Figure 51 **Unblock your SIM card**

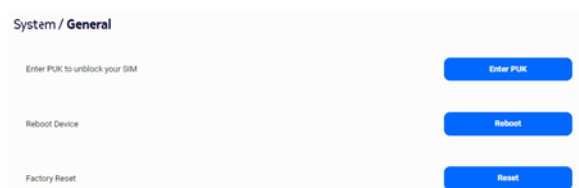

The Enter PUK to unblock your SIM card entry box will appear. Enter your PUK and PIN numbers.

Figure 52 Enter PUK and PIN to unblock your SIM card

Enter PUK to unblock your SIM

Please note: Entering the SIM PUK incorrectly ten(10) times will result in the SIM card being disabled. You will need to contact your operator to enable your SIM card.

PUK*

Enter PUK ! 👁

Wrong PIN has been entered 3 times. SIM is blocked
Remaining PUK attempts: 10

New PIN*

Enter PIN 👁

Confirm new PIN* 🖱

Cancel OK

Entering the SIM PUK number incorrectly 10 times will result in the SIM card being disabled. You will need to contact your operator to enable the SIM card.

Rebooting the FastMile 5G Gateway 3

Rebooting the FastMile 5G Gateway 3 cycles power to the device and keeps all configurations made to date.

Using the WebUI

From the System, General screen, click Reboot.

The FastMile 5G Gateway 3 reboots and keeps existing configuration parameters.

Resetting the FastMile 5G Gateway 3 to factory default

Resetting the FastMile 5G Gateway 3 to factory default removes all configurations made to date.

Using the WebUI

From the System, General screen, click Reset.

The FastMile 5G Gateway 3 restarts and erases existing configuration

Changing the password



Note: For security reasons, we recommend changing the default password once you have logged into the WebUI.

Passwords must contain 10-64 characters. The first character of the password cannot be a special character. The same character cannot be used consecutively eight times.

Passwords must have at least three of the following four types of characters:

- uppercase character (A-Z)
- lowercase character (a-z)
- number (0-9)
- special character (!#+, -/:=@_)

From the System, General screen, click Change Password.

The Change Password screen appears.

Figure 53 System: Change Password

The screenshot shows a web form titled "Change Password". At the top, there is a note: "Please note: The only way to restore a lost password is via factory reset". Below this, there are three input fields: "Current Password", "New Password", and "Confirm Password". Each field has a toggle icon (an eye) to the right, indicating that the passwords are hidden. Below the "New Password" field, there is a password strength requirement: "10-64, must start with a letter or number and must contain three out of four of the following categories: upper case, lower case, numbers, special characters !#+, -./:=@_". At the bottom right of the form, there are two buttons: "Cancel" and "Update Password".

Enter the current password, (the original password is located on the quick onboarding guide).

Enter the new password again to confirm.

Click Update Password.

Your password is changed.

Device management

Click Device management.

The Device management screen appears.

Figure 54 System: Device Management

System / Device Management

Host Name	N-5C06464410
MAC Address	c8:d3:f:74:66:41
Host Alias	
	
Host Name	Host Alias

You can configure the following device management settings:

- host name
- MAC address
- host alias

Click Add device.

The values appear in the table below.

Logging out

Click Logout from the bottom of the FastMile 5G Gateway 3 menu.

Troubleshooting

This section provides additional information about the following:

- repositioning for a better signal
- using the power button
- using the reset button

Repositioning for a better signal

If you want to reposition the FastMile 5G Gateway 3 for a better signal, do the following:

- power off the FastMile 5G Gateway 3
- disconnect the gateway from the electrical outlet
- move the FastMile 5G Gateway 3 to a different position, for example, the other side of the room or a higher position
- connect the FastMile 5G Gateway 3 to an electrical outlet at the new location and power it on



Note: You may need to repeat the steps several times before finding the final location for the FastMile 5G Gateway 3.

Once you have a good signal, it is important that you do not reposition or rotate the FastMile 5G Gateway 3. You are now ready to connect devices to your FastMile 5G Gateway 3.

Using the power button

The Power button is located on the backside of the FastMile 5G Gateway 3 and is marked On/Off.


Press the Power button for one second (Off), wait one second, and then press the Power button again (On).

The FastMile 5G Gateway 3 reboots.

Using the reset button

Reset the device by pressing the reset button for 5 seconds or more. The reset button is located on the label on the bottom of the device.

Figure 55 Location of reset button

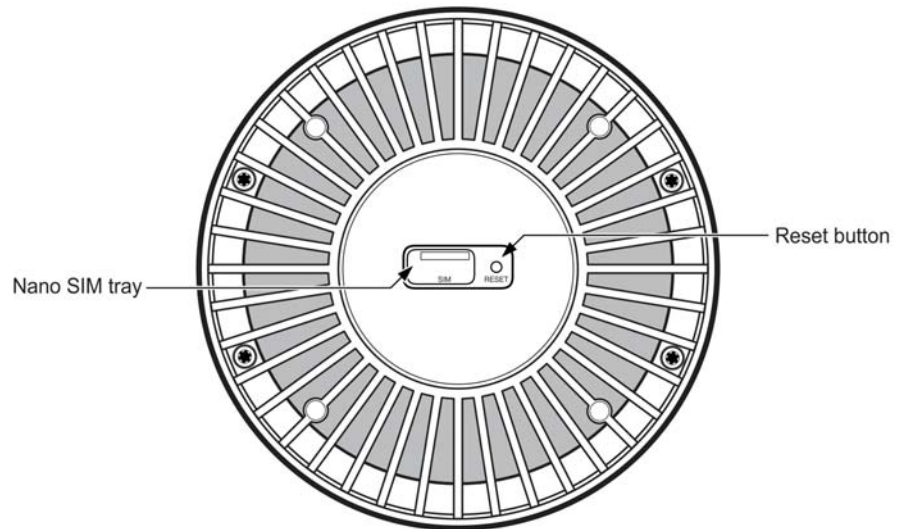

37278



Note: During factory reset, the FastMile 5G Gateway 3 could restart twice. This is normal behavior.

Glossary

This glossary provides the explanation and optional descriptions of most acronyms and initialisms that appear in this document.

3GPP	3 rd Generation Partnership Project
4FF	4 th Form Factor
AC	Alternating Current
ACS	Automatic Configuration Server
ALG	Application-level Gateway
AP	Access Point
APN	Access Point Name
CA	Carrier Aggregation
CB	Certification Body
CE	Consumer Electronics
DMZ/ALG	Demilitarized Zone/Application-Level Gateway
DHCP	Dynamic Host Configuration Protocol
EN-DC	E-UTRAN New Radio - Dual Connectivity
EARFCN	E-UTRA Absolute Radio Frequency Channel Number
IMSI	International Mobile Subscriber Identity
IP	Internet Protocol or Internet Protocol
IPv6	Internet Protocol version 6
LTE	Long Term Evolution
MIMO	Multiple-Input Multiple-Output
MU-MIMO	Multi-User Multiple-Input Multiple Output
NR	New Radio
NR-ARFCN	New Radio Absolute radio-frequency channel number
NSA	Non-Standalone
NTP	Network Time Protocol
NWCC	Nokia Wi-Fi Cloud Controller
PCI	Peripheral Component Interconnect
QSG	Quick Start Guide
RF	Radio Frequency
RRM	Radio Resource Management
RSRP	Reference Signal Received Power
RSRQ	Reference Signal Received Quality
SA	Service Affecting or Standalone
SIM	Subscriber Identify Module

SNR	Signal to Noise Ratio
SSID	Service Set identifier
UL	Up link
USB	Universal Serial Bus
VDC	Volts Direct Current
WAN	Wide Area Network
WebUI	Graphic User Interface
WLAN	Wireless Local Area Network
WPS	Wi-Fi Protected Setup

Identification

See the table below for the FastMile 5G Gateway 3 supported models and variants.

Table 1 Identification of FastMile 5G Gateway 3 supported models and variants

Model	Kit part number	Description	Device part number on bottom label
5G12-13W-A	3TG-00800-AAAA	Unit without TEL port	3TG-00799-ABAA
	3TG-00800-BAAA	Unit with TEL port	3TG-00799-ABAB

Technical specifications

Dimensions	Diameter 125 mm (4.92in) x Height 218.5 mm (8.58 in) Weight <1400 g (2.5 lbs) without the power adapter
Model	5G12-13W-A
Certifications	CE, CB, RCM, and WFA
Operating environment	0°C to 40°C (32°F to 104°F) Indoor use only. Device is capable of operation up to 45°C (113°F) , but with reduced performance.
Operating humidity	5% to 85%, non-condensing
Short-term humidity	5% to 93% non-condensing
Storage temperature	-40°C to 70°C (-40°F to 158°F)
SIM card	4FF/nano-sized SIM slot
Power	12V DC power adapter consumption: < 36W
Interior antennas	
4G/LTE	Omni-directional antenna (up to 5 dBi):
5G	5G omni-directional antenna (1 to 4 dBi) or high gain directional antenna (9 to 11 dBi), depending on the 5G FR1 band
Interior antenna gain	
4G/LTE	1-5dBi, depending on the LTE band
5G	1-11dBi, depending on the 5G FR1 band
Radio frequency safety distance	20 cm (7.8 inches)

5G NR

- 3GPP Release 15 5G NR NSA/SA: Option 3X, Option 3A
 - Supported 5G NR radio bands
- Sub-6 GHz (FDD)
- n1 2100 (UL: 1920-1980 MHz; DL: 2110-2170 MHz)
 - n3 1800 (UL: 1710-1785 MHz; DL: 1805-1880 MHz)
 - n5 800 (UL: 824-849 MHz; DL: 869-894 MHz)
 - n7 2600 (UL: 2500-2570 MHz; DL: 2620-2690 MHz)
 - n8 900 (UL: 880-915 MHz; DL: 925-960 MHz)
 - n28 700 (UL: 703-748 MHz; DL: 758-803 MHz)
- Sub-6 GHz (TDD)
- n40 TD 2300 (2300-2400 MHz)
 - n78 TD 3500 (3300-3800 MHz)
- 5G NR antenna gains
- n7/n40/n78: 9-11dBi
 - n1/n3: 2-4dBi
 - n5/n8/n28: 1-3dBi

LTE

- Supported LTE radio bands:
- FDD:
- B1 (2100 MHz)
 - B3 (1800 MHz)
 - B5 (800 MHz)
 - B7 (2600 MHz)
 - B8 (900 MHz)
 - B28 (700 MHz)
- TDD:
- B40 (2300 MHz)
- LTE antenna gains
- B7, B40: 3-5dBi
 - B1, B3: 2-4dBi
 - B5, B8, B28: 1-3dBi



Note: Actual supported radio frequency (RF) bands may vary in different regions due to certifications.

Wi-Fi

The device is also compliant with 802.11 a/b/g/n/ac/ax.

The device supports up to 128 clients per band and per service set identifier (SSID), and the device supports a total of 128 clients.

Radio - cellular (WAN-side)

- 3GPP Release 5G NSA option 3x
- 3GPP Release 5G SA
- Downlink: 4x4MIMO and 256 QAM
- Uplink: 1x1 SISO 256 QAM

LTE CA 5G EN-DC mode

The FastMile 5G Gateway 3 implements the 5G NSA (Option 3x) configuration, meaning it uses a 4G/LTE carrier and 5G NSA carrier at the same time to connect to the service provider's network. The control plane is carried over the LTE network and the user plane is carried over both the LTE and 5G NSA networks.

5G SA

When operating in the 5G SA mode, the FastMile 5G Gateway 3 uses the 5G network to connect to the service provider's network.

Certification

The FastMile 5G Gateway 3 is certified for CE, CB, RCM, and WFA regions, which cover the following 4G LTE and 5G NR bands:

Table 2

4G LTE:	1		5G:	N1
	3			N3
	5			N5
	7			N7
	8			N7
	28			N28
	40			N40
				N78

Warranty and safety

For information on the hardware Limited Warranty, please go to www.nokia.com/fastmile. Read the FastMile 5G Gateway 3 Safety and Regulatory information that is included with the product for the following information:

- safety warnings (risk of electrical shock or fire)
- caution (potential equipment damage)
- environmental and regulatory requirements
- end of life collection and treatment
- simplified EC declaration or conformity
- specific precautions for EMS warnings.

Manufacturer information

Table 3

Manufacturer	Nokia Solutions & Networks Oyj www.nokia.com
Address	Karakaari 7, 02610 Espoo, Finland
Document number	3TG-02288-AAAA-TCZZA -01
Customer support	Contact your service provider where you purchased the device.

About Nokia

We create the technology to connect the world. Powered by the research and innovation of Nokia Bell Labs, we serve communications service providers, governments, large enterprises and consumers, with the industry's most complete, end-to-end portfolio of products, services and licensing.

From the enabling infrastructure for 5G and the Internet of Things, to emerging applications in digital health, we are shaping the future of technology to transform the human experience. networks.nokia.com

Nokia is a registered trademark of Nokia Corporation. Other product and company names mentioned herein may be trademarks or trade names of their respective owners.

© 2022 Nokia

Nokia Oyj

Karakaari 7

FI-02610 Espoo, Finland

www.nokia.com